



Fig. KBPRV20 PN20 Bronze Pressure Reducing Valve Installation & Maintenance Instructions

GENERAL NOTES OF SAFETY

1. The PRV must only be used:
 - for the specified purpose
 - if it is in satisfactory condition
 - whilst taking the necessary safety and hazard precautions
2. Always read the installation instructions.
3. The PRV must only be installed in accordance with the operating pressure and temperature stated on the product. The manufacturer shall not be responsible for damage caused by external influences.
4. Installation must be carried out by a qualified individual.

INSTALLATION AND ADJUSTMENT

- The flow direction must coincide with the arrow on the valve body.
- The pipe should be thoroughly flushed prior to installation of the PRV, to prevent small particles entering and damaging the internal components.

MAINTENANCE

- The PRV should be regularly inspected in accordance with BSEN-1567.
- After long periods of inactivity the valve must be tested.

CAUTION!!

When carrying out maintenance on the PRV, the valve should be isolated and the system pressure should be removed.